JOY TUTUS

A / EN

USAGE GUIDELINES

SKU: A1333-00014-BK


IMPORTANT

Before installation, please make sure that all accessories are ready. (As shown in the picture below).

Estimated installation time:

30-45 minutes

PRODUCT INFORMATION

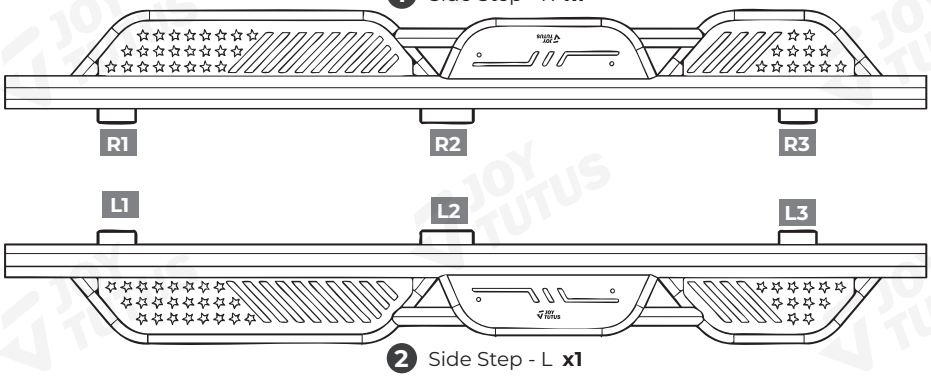

1 Side Step - R **x1**

2 Side Step - L **x1**



3 Bracket - L1 **x1**



4 Bracket - R1 **x1**



5 Bracket - L2 **x1**



6 Bracket - R2 **x1**



7 Bracket - L3 **x1**




8 Bracket - R3 **x1**



x4

9 10mm rubber plug



x6

10 M8x30 Hex Head Bolt



x6

11 M8x25x2 Flat Washer



x6

12 Φ8 Spring Washer



x12

13 M6x25 carriage bolt



x12

14 M6 Flange Nut



x12

15 Φ6x18x1 Flat Washer



x12

16 Φ6 Spring Washer



x12

17 M8 button head hex socket screw



x24

18 M8x16x1.0 flat washer



x12

19 Φ8 Spring Washer



x12


20 M8 hexagon nut



x1

21 Spare parts kit

INSTALLATION COMPLETION DIAGRAM

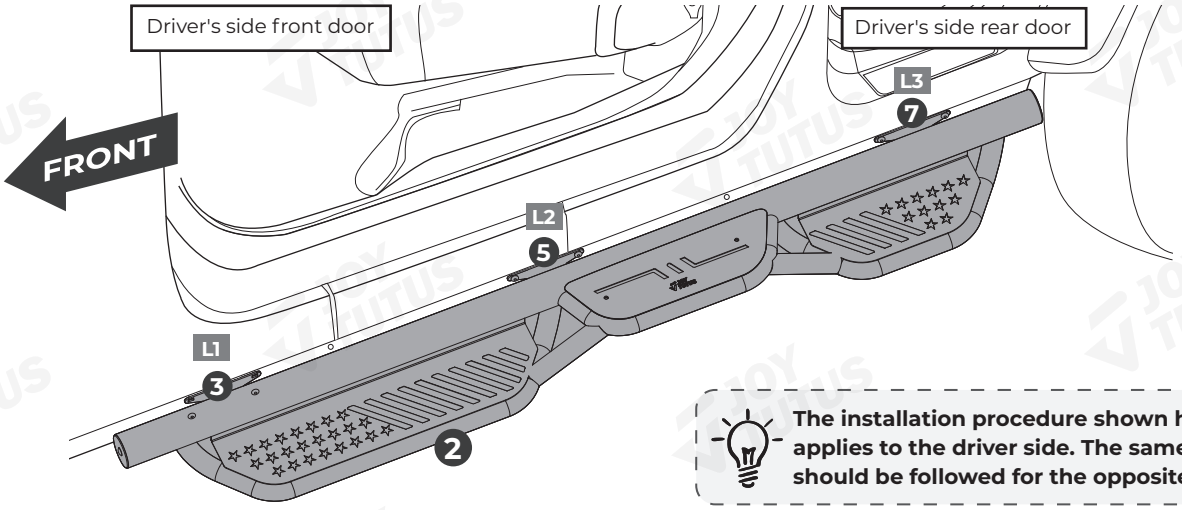

The installation procedure shown here applies to the driver side. The same steps should be followed for the opposite side.

Customer Support


Contact us by email: service@joytutus.com

JOYTUTUS help center:
http://support.joytutus.com

INSTALLATION METHOD

When installing this product, first park the vehicle in a safe area and turn off the engine.

STEP 1

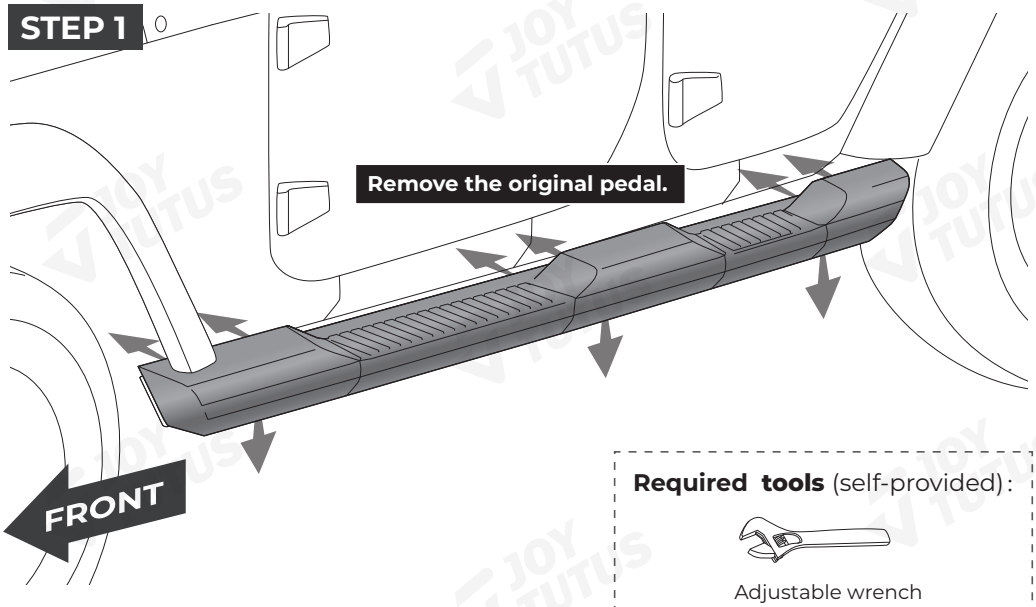


Required tools (self-provided):

Adjustable wrench

STEP 2

Required accessories:

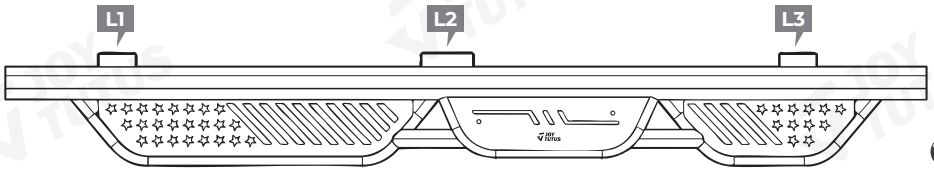

2 Side Step - L **x1**



x6

17 M8 button head hex socket screw



3 Bracket - L1 **x1**



5 Bracket - L2 **x1**



7 Bracket - L3 **x1**



x12

18 M8x16x1.0 flat washer




x6

19 Φ8 Spring Washer




x6

20 M8 hexagon nut

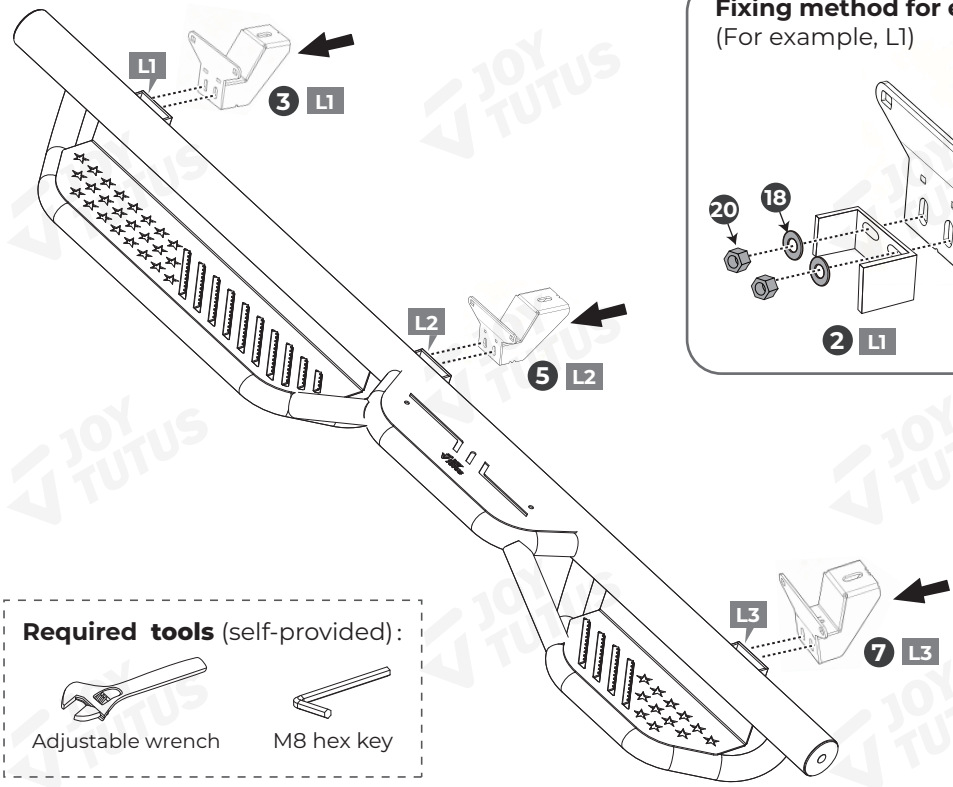

Fixing method for each location:
(For example, L1)

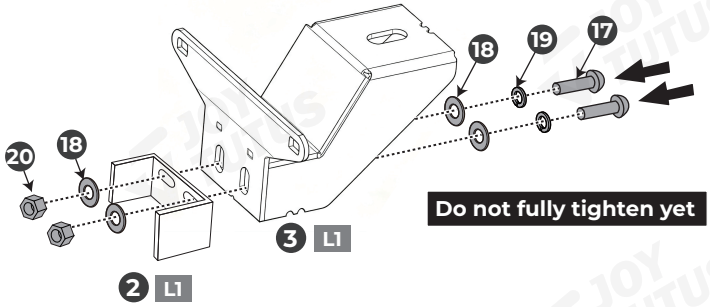

Required tools (self-provided):


Adjustable wrench

M8 hex key

STEP 3

This step requires two people:
one to support and hold the Side Step in position,
and the other to go underneath the vehicle and fasten the hardware that attaches the Side Step to the corresponding mounting points on the vehicle chassis.

Required accessories:



x6 ⑩ M8x30 Hex Head Bolt



x6 ⑪ M8x25x2 Flat Washer



x6 ⑫ Φ8 Spring Washer



x6 ⑬ M6x25 carriage bolt



x6 ⑭ M6 Flange Nut




x6 ⑯ Φ6 Spring Washer




x6 ⑮ Φ6x18x1 Flat Washer

Required tools (self-provided):




Adjustable wrench




M6 / M8 hex key


STEP 3-1

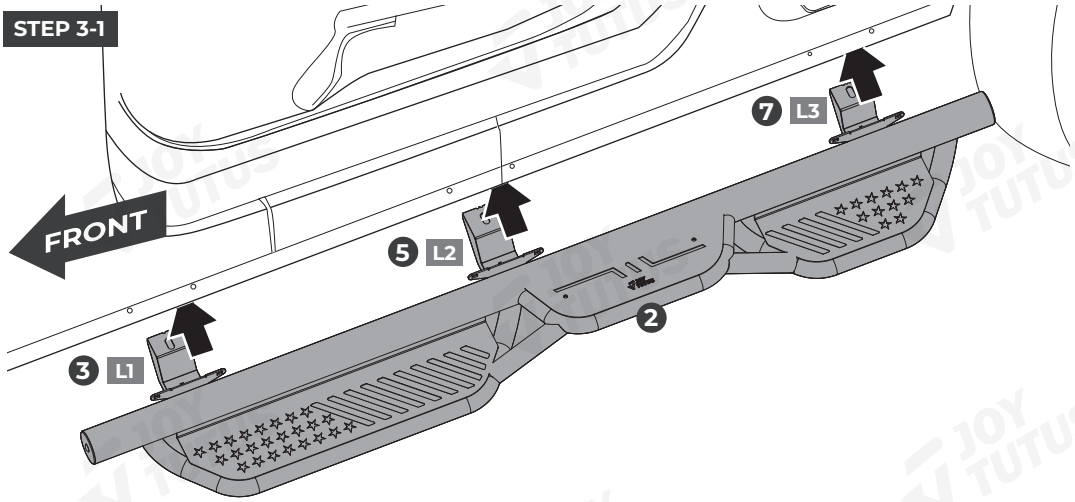



STEP 3-2


Fixing method for each location: (For example, L2)

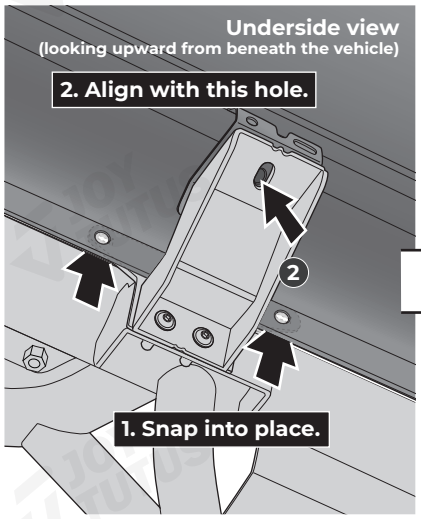

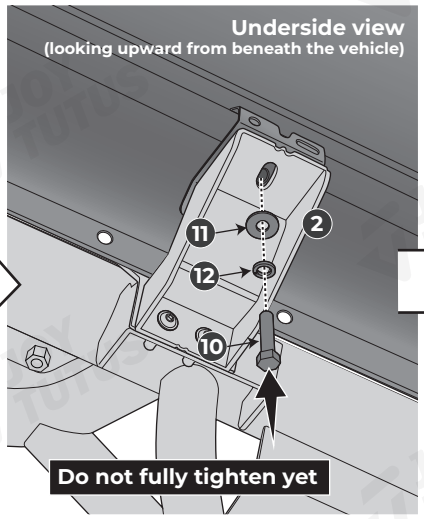

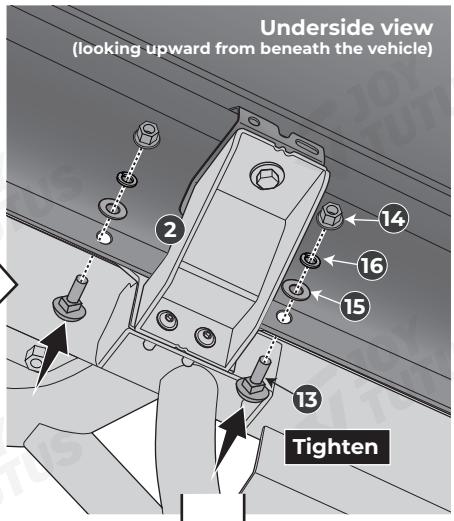


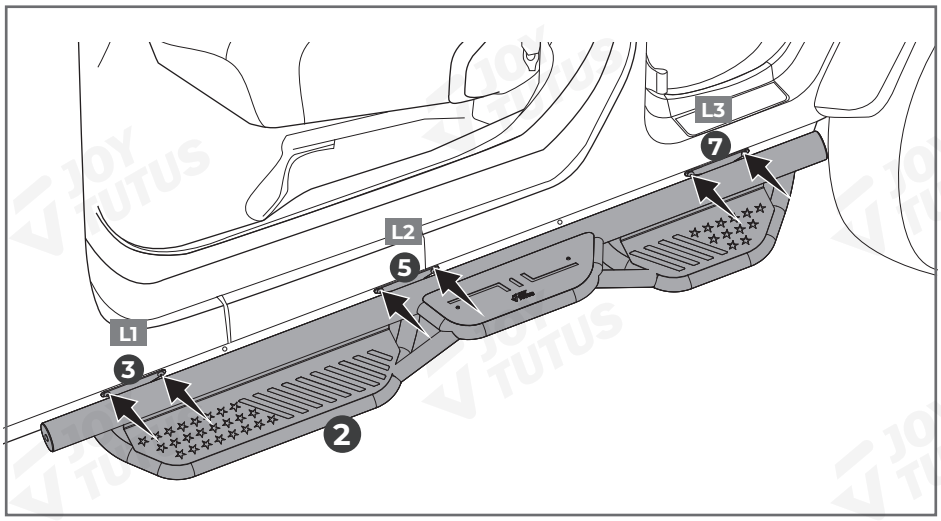

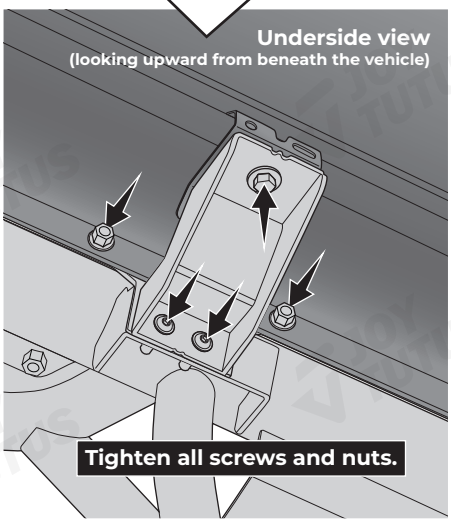


FUNCTION

Required tools (self-provided):





Adjustable wrench



M4 hex key

STEP 1

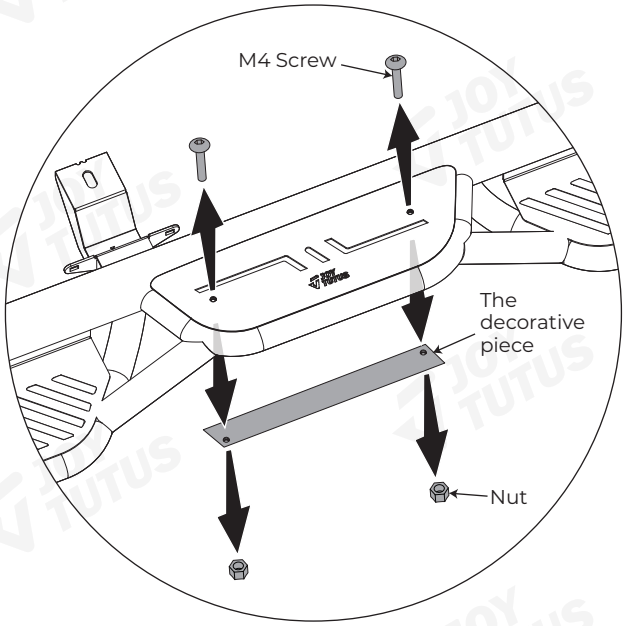


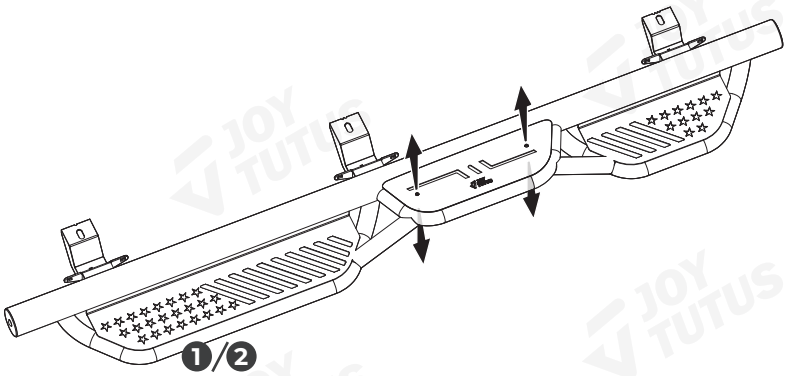

Disassemble the screw and nut
Remove the decorative piece

STEP 2

The decorative panel can be sprayed with the desired color using your own spray paint and then reinstalled.



Spray the decorative panel with the desired color using your own spray paint.

