


IMPORTANT

1. Please read the installation instructions carefully before you start.
2. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below.


PRODUCT INFORMATION

SKU·A2701-03801

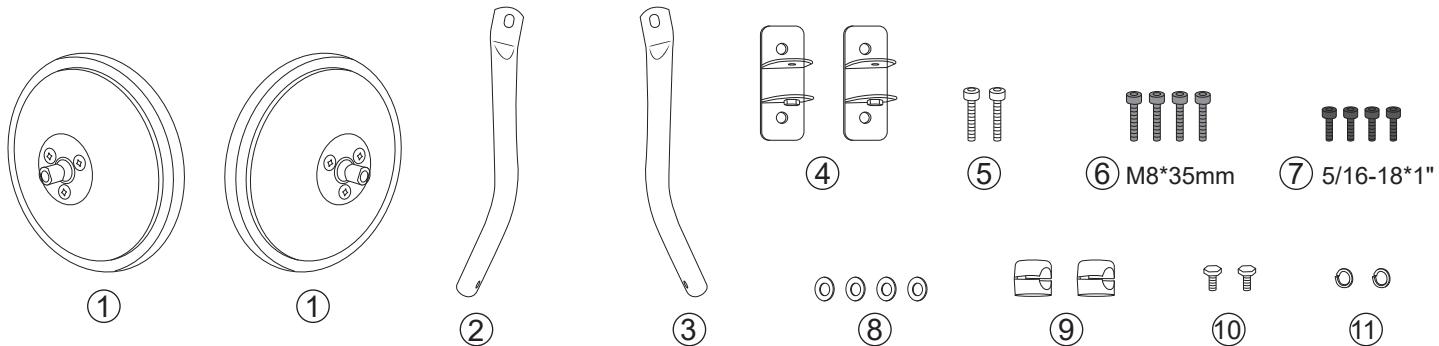


INSTALLATION STEPS

STEP 1

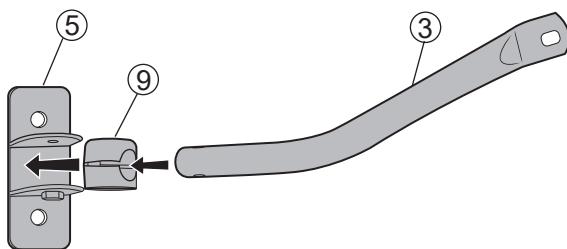

Assemble the right mirror arm③, billet bushing⑨ and mounting bracket⑤.


STEP 2

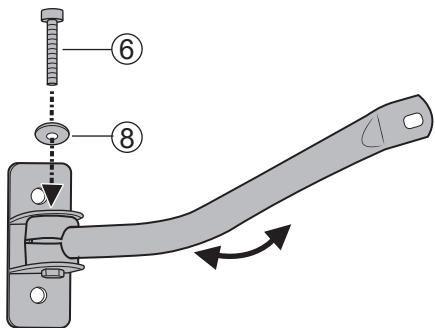

Install the bolt ⑥ and flat washer⑧, tighten the bolt, don't over tighten them, you can adjust them as needed.


Wrangler JK JKU

STEP 3

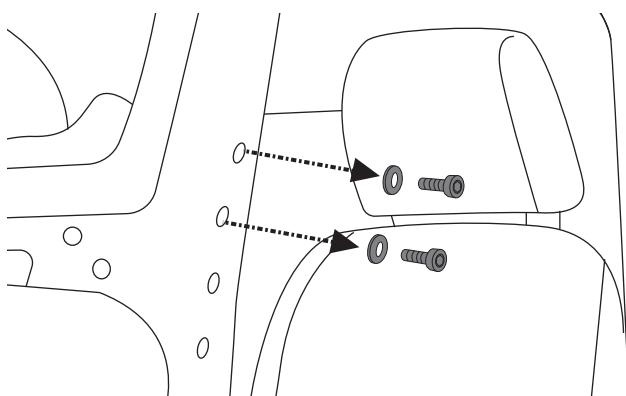

Remove two original flush mount torx head bolts and washers just in front of door hinge.

STEP 4

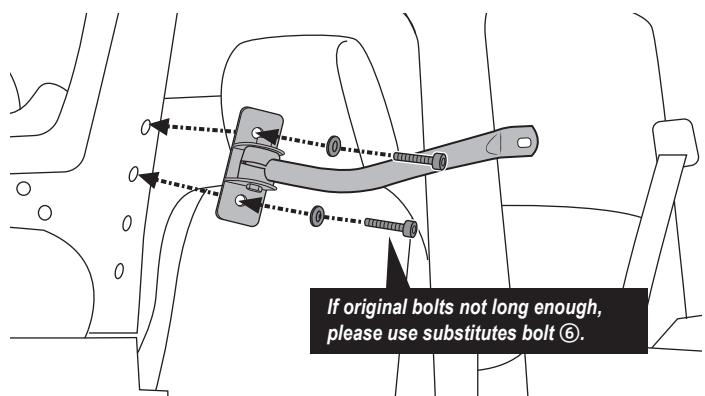


Use the two original bolts and washers just removed to fix the bracket on the flat side.


Wrangler TJ

METHOD ONE

STEP 3

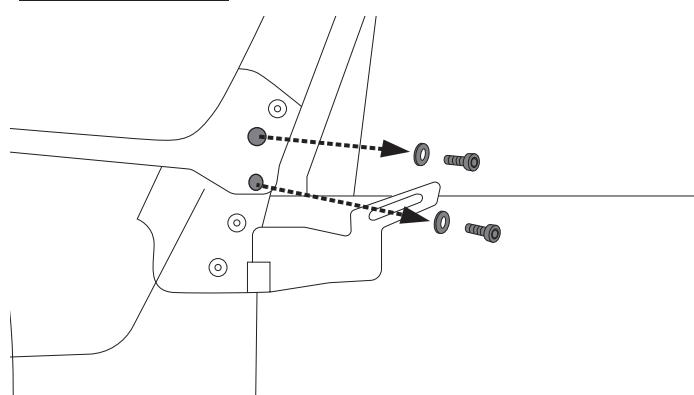


Remove two original flush mount torx head bolts and washers just in front of door hinge.

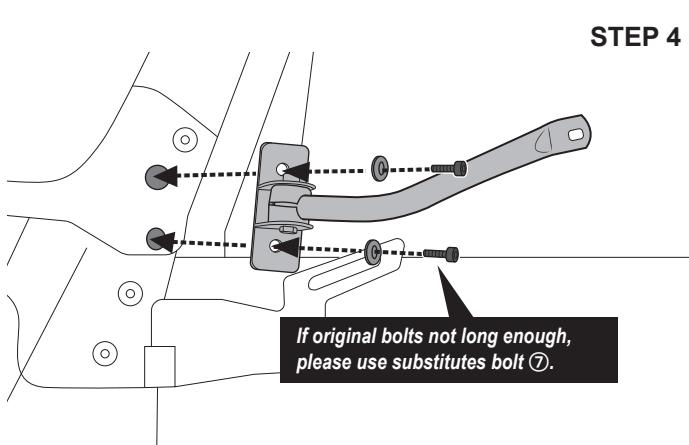


Use the two original bolts and washers just removed to fix the bracket on the flat side.

METHOD TWO

STEP 3

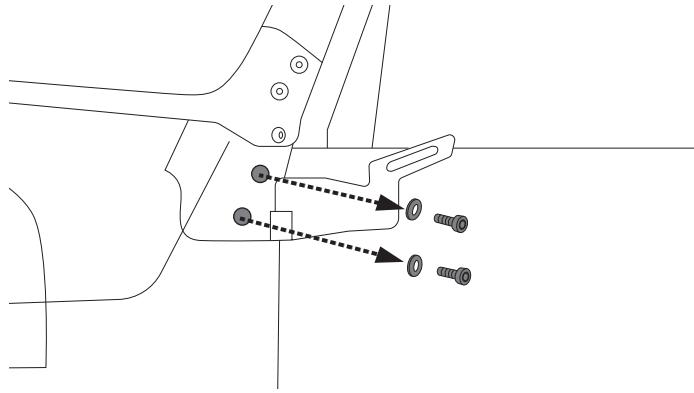


Remove two original flush mount torx head bolts and washers just in front of door hinge.

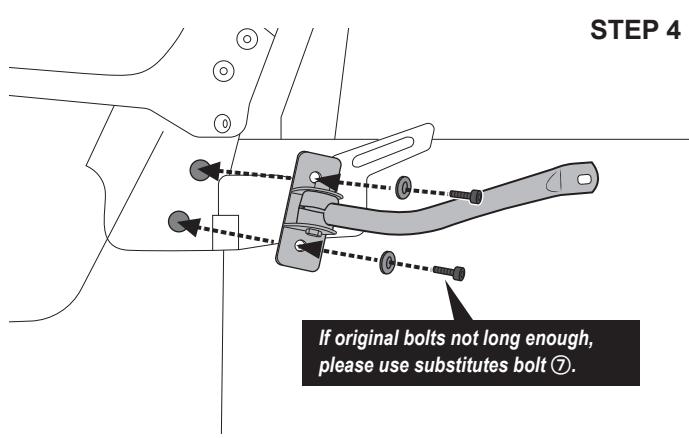


Use the two original bolts and washers just removed to fix the bracket on the flat side.

STEP 5

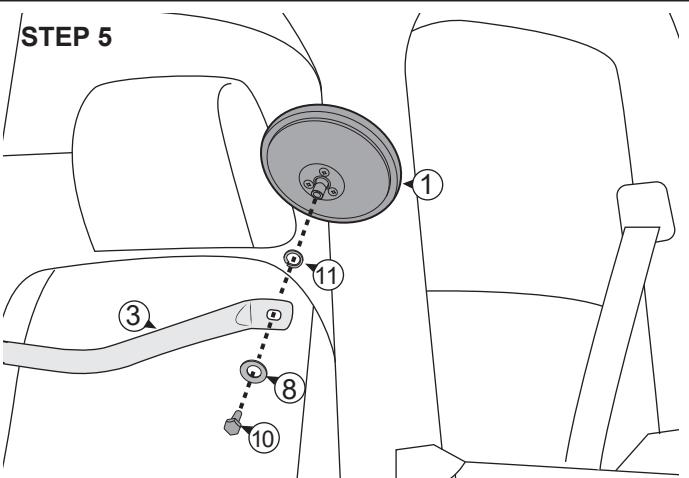

Attach mirror ① to flat side of arm ③ using the bolt ⑩, flat washer ⑧ and lock washer ⑪.

STEP 6

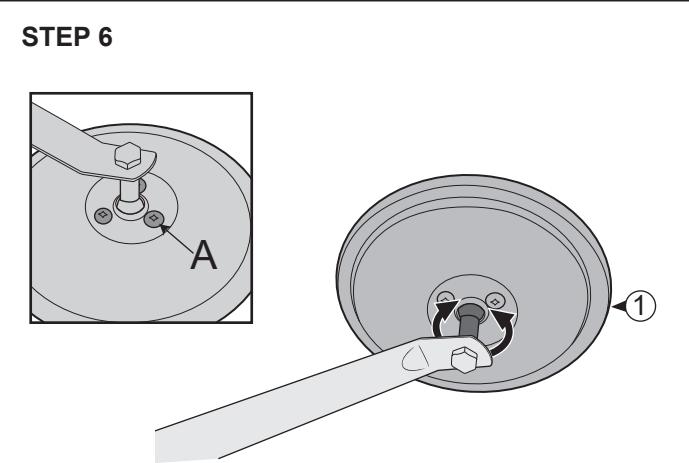

Adjust the mirror ① head into desired position, tighten three screws [A], DO NOT over tighten. The mirror ① should be tight but able to be adjusted if needed.

STEP 7: Repeat steps 1-6 to install the other side.