

IMPORTANT

Before installation, please make sure that all accessories are ready. (As shown in the picture below).

CUSTOMER SUPPORT

JOYTUTUS help center:




Contact us by email:
service@joytutus.com




<http://support.joytutus.com>


PRODUCT INFORMATION

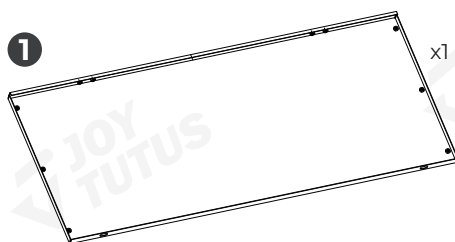


Panel 1

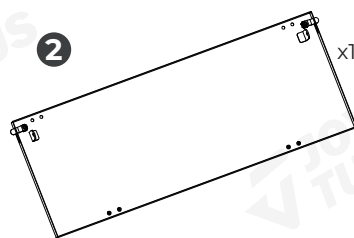


Panel 2

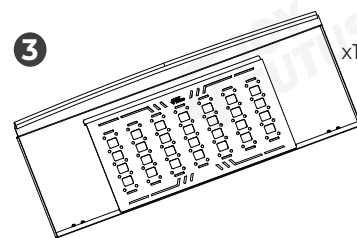


Panel 3

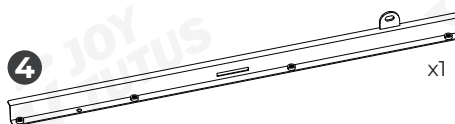


Left connection bracket

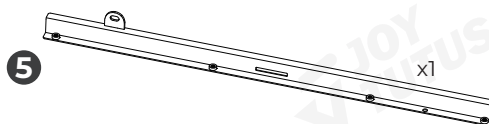


Right connection bracket

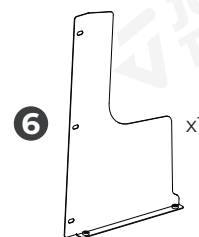


Left connection plate

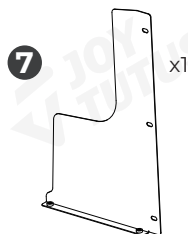


Right connection plate

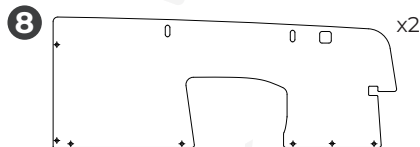


Panel 4

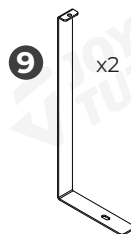


Mounting bracket

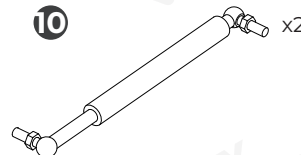

Ball-head hydraulic strut

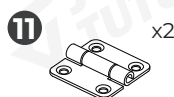


Stainless steel hinge

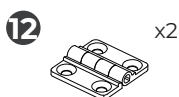

Aluminum alloy limiting hinge



Single-sided EVA foam tape

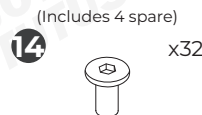

M6*12 thin head hex socket screw




M6*14 countersunk hex socket screw




M8*40 hex socket button head screw



Non-metallic insert hex flange lock nut, M8

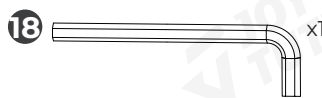


Hex key (Allen wrench) S=4mm

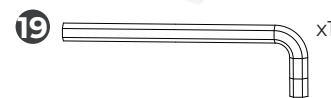

Hex key (Allen wrench) S=5mm




Open-end wrench 12mm

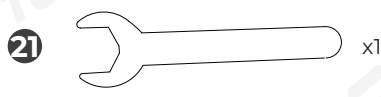

Open-end wrench 13mm



✓ INSTALLATION COMPLETION DIAGRAM

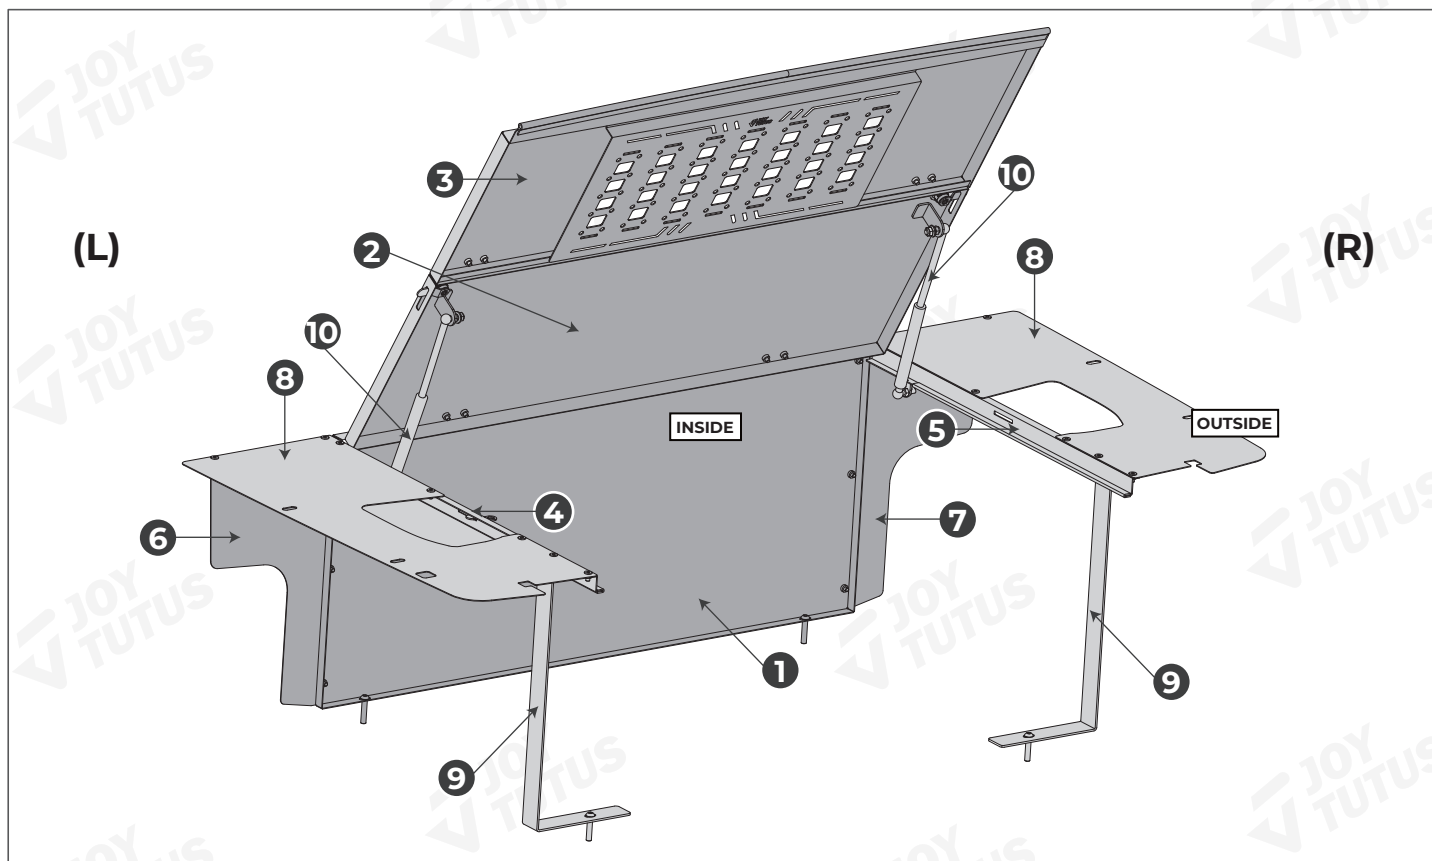


✓ INSTALLATION TIPS

STEP 1:

Required accessories:

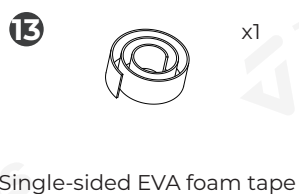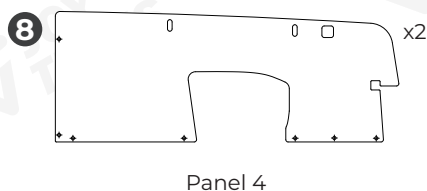


Required tool:

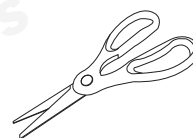

(to be prepared by oneself)





Cut [13] to the appropriate length and attach it to [8], ensuring that the mounting holes are not covered.

Please note that [13] should be symmetrically attached to [8].

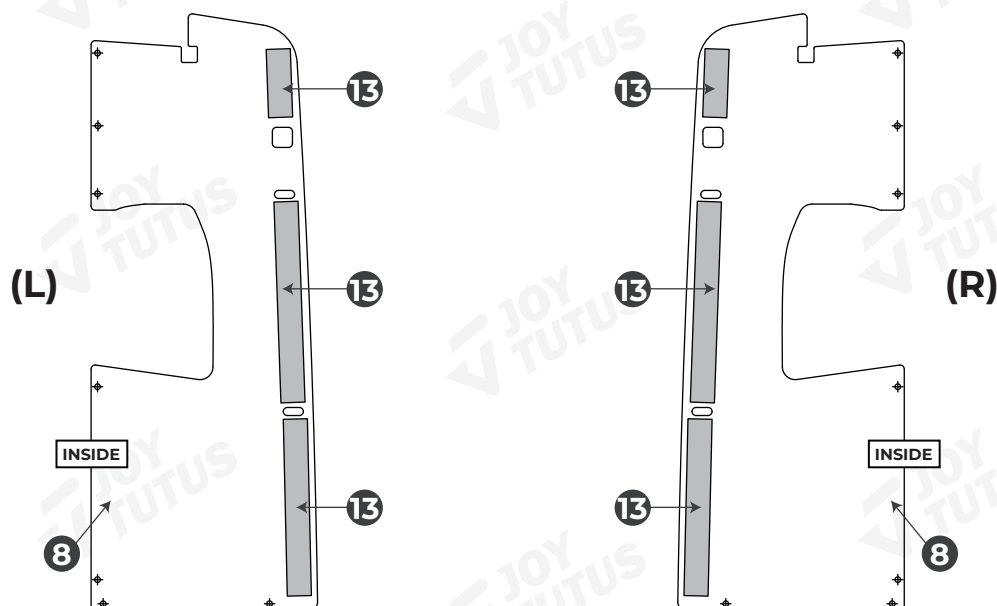


STEP 2:

Required accessories:

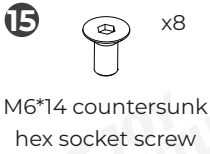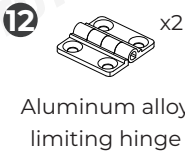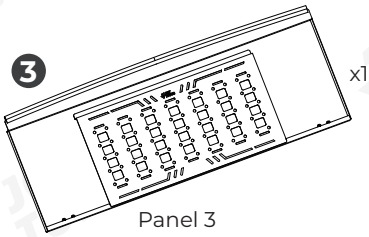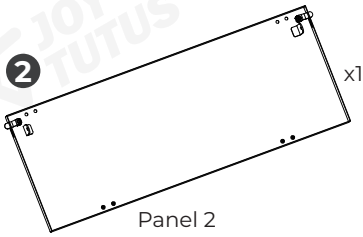


Use [15] to secure [12] and [2], and [12] and [3] together, 4 PCS in total, at 2 locations.

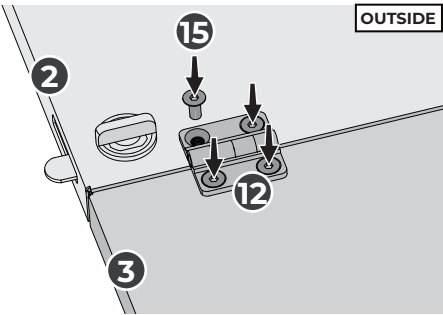

Required tool:







Hex key (Allen wrench) S=4mm

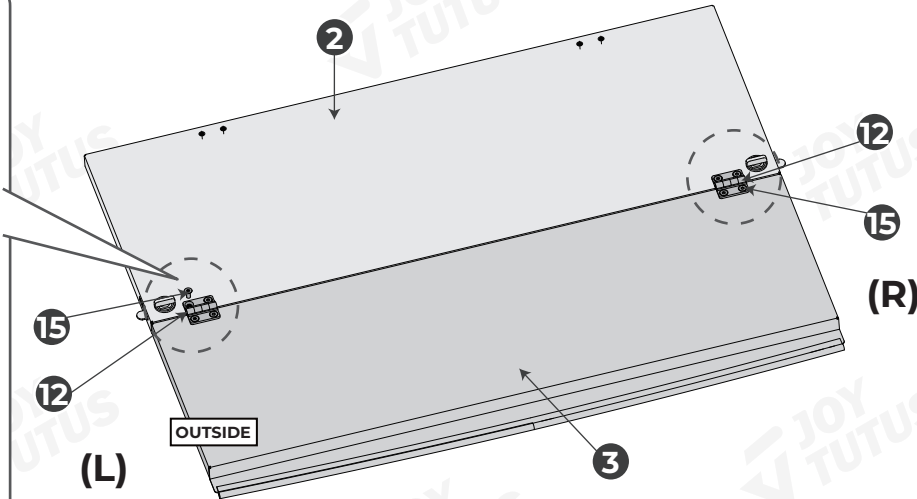


STEP 3:

Required accessories:

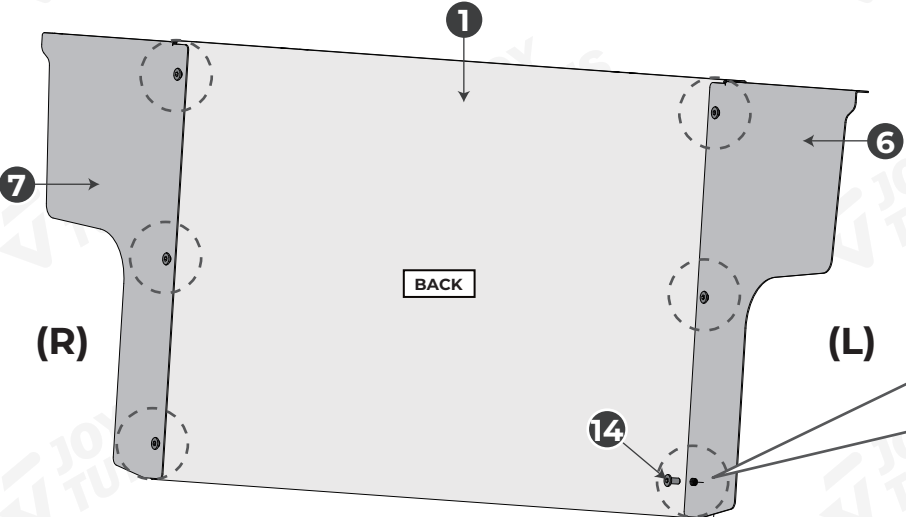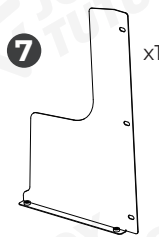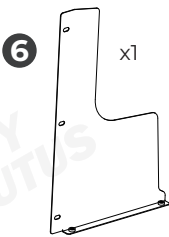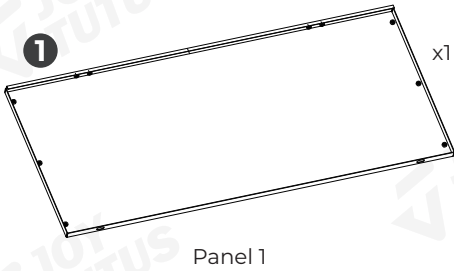

Secure using [14] through [6] with [1], 3 PCS, repeat the same on the other side.

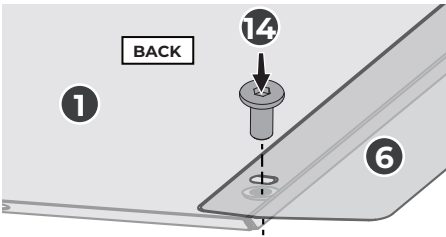


Required tool:



Hex key (Allen wrench) S=4mm

STEP 4:

Remove the original roof of the vehicle's compartment.

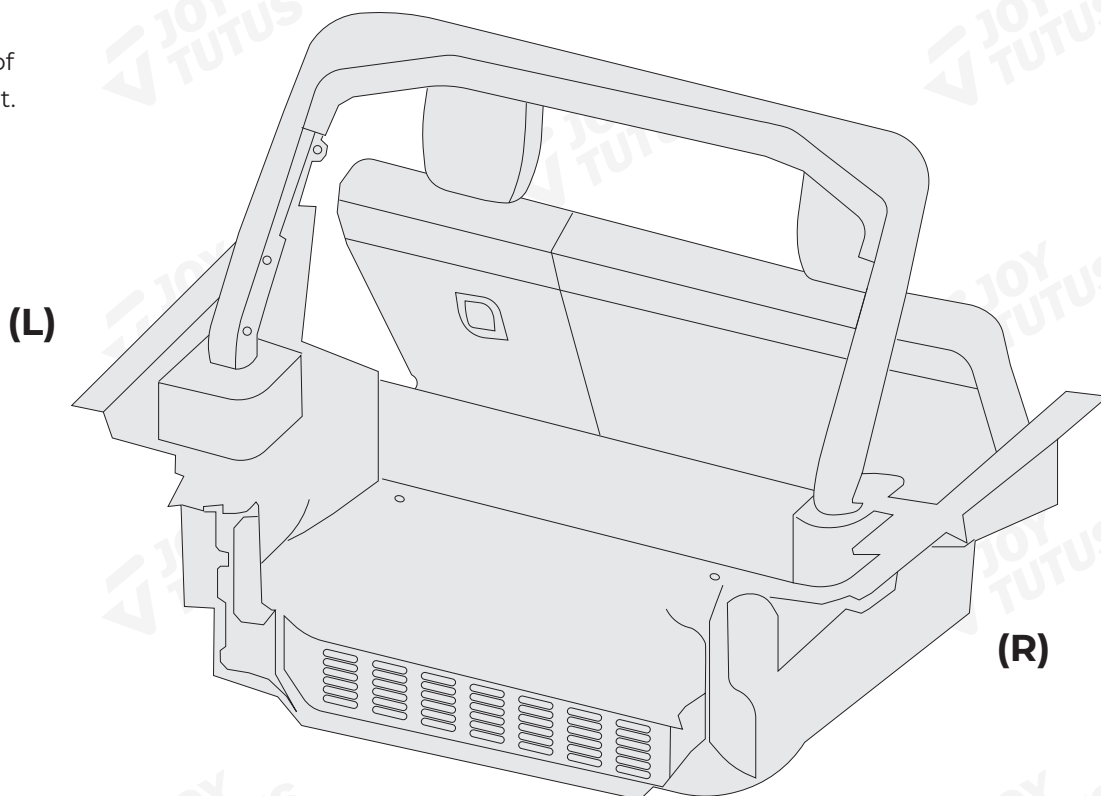


STEP 5:

Required accessories:



M8*40 hex socket button head screw


Use [16] to lock the assembly from **Step 3** onto the carriage, 2PCS.

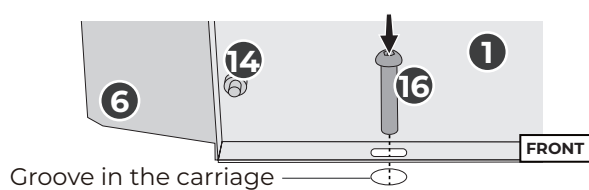

Required tool:



Hex key (Allen wrench) S=5mm

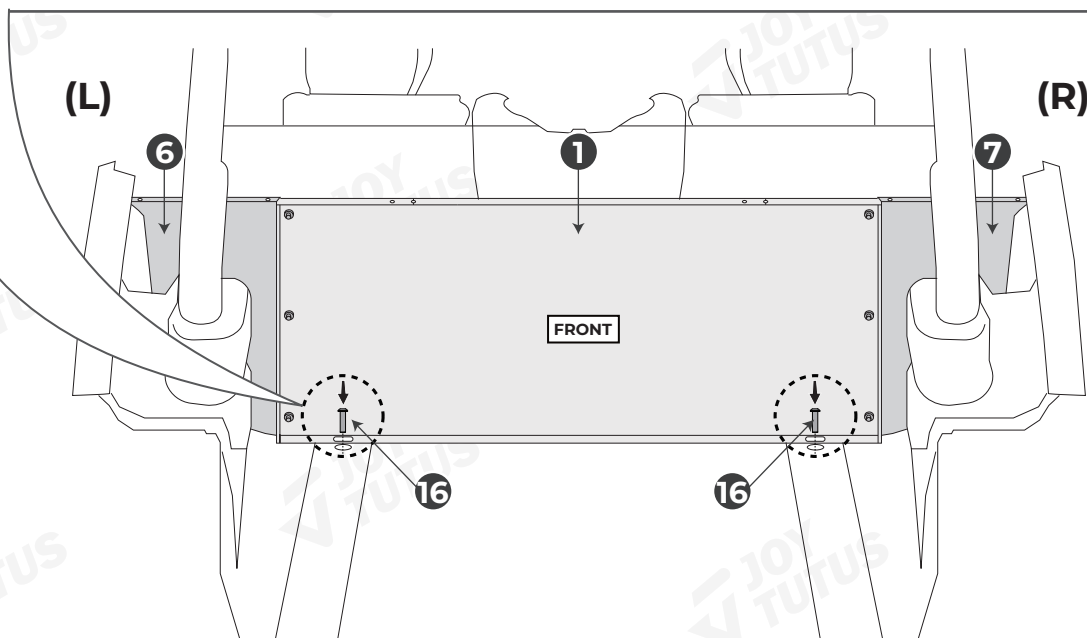

STEP 6:

Required accessories:





M6*12 thin head hex socket screw

Required tool:



Hex key (Allen wrench) S=4mm

Refer to the diagram and symmetrically install another [8] on the opposite side.

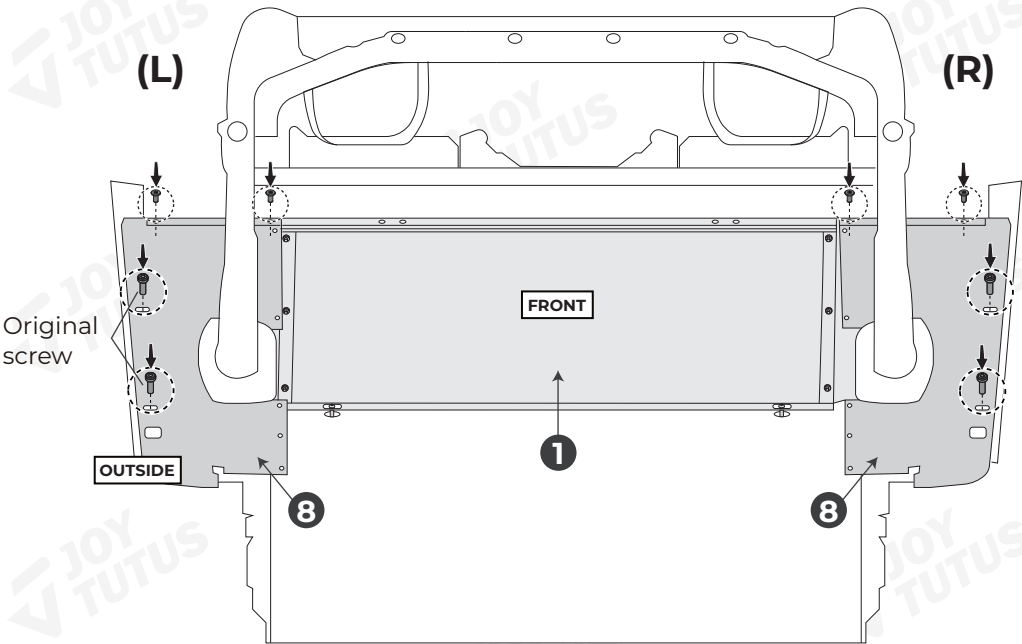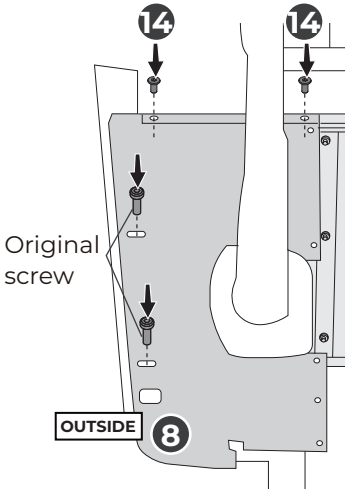


STEP 7:


Required accessories:



Left connection bracket

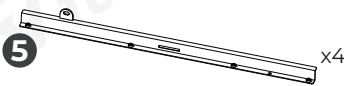

Right connection bracket

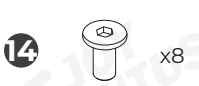



M6*12 thin head hex socket screw

Required tool:




Hex key (Allen wrench) S=4mm

Use [14] to secure [8] and [4], 4 PCS.
Repeat the same operation on the other side.

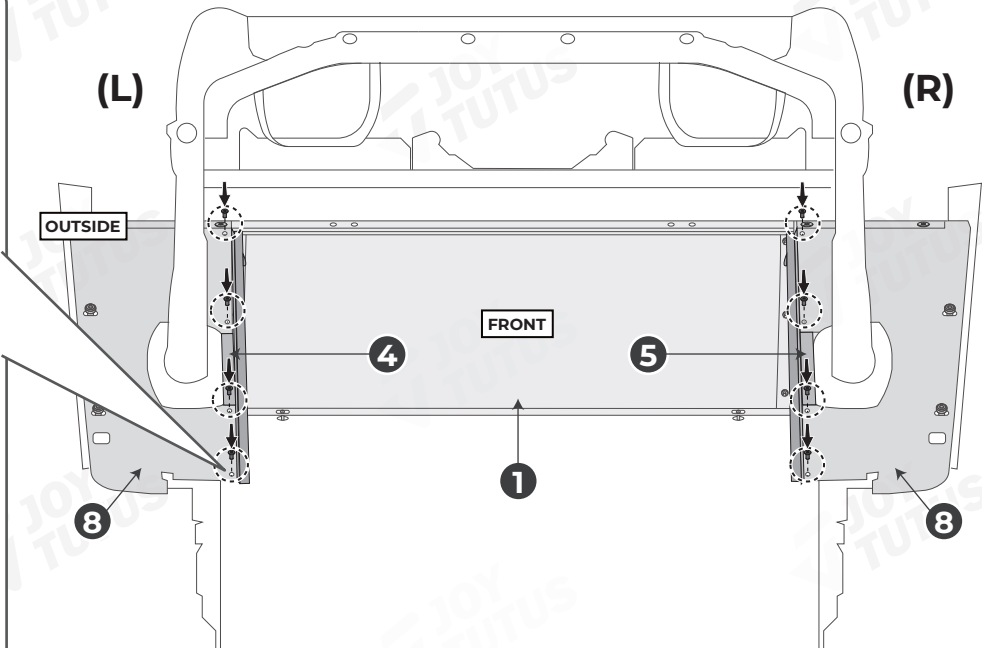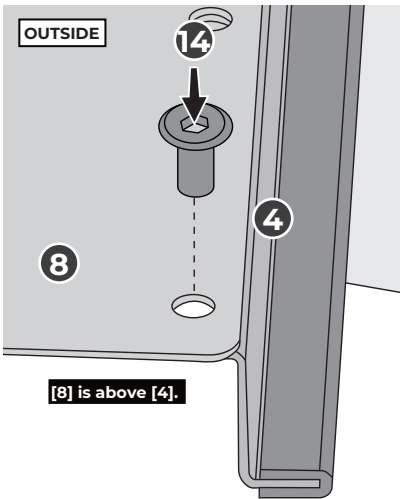

STEP 8:

Required accessories:

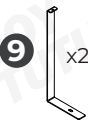- 

9 x2

Mounting bracket
- 

14 x2

M6*12 thin head hex socket screw
- 

16 x2

M8*40 hex socket button head screw

Required tool:

- 



18

Hex key (Allen wrench)
S=4mm
- 

19


Hex key (Allen wrench)
S=5mm

Secure [14] in sequence through [8], [4], and [9].(Use tool [18].)
Secure [16] to the compartment using [9].(Use tool [19].)
Repeat the same process on the other side.

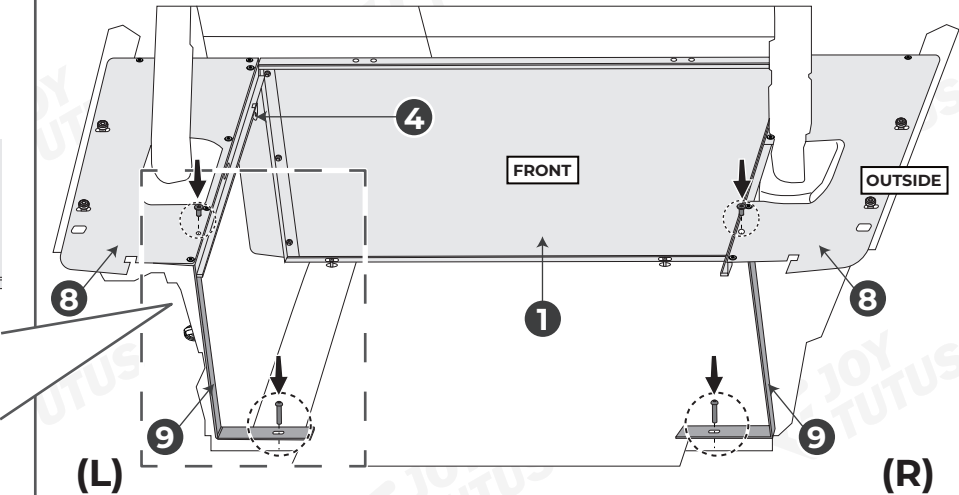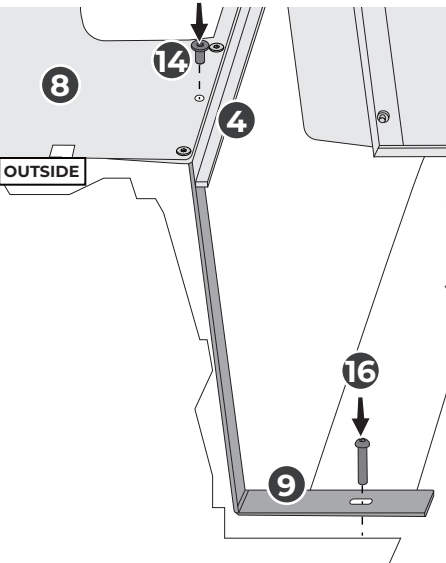

STEP 9:

Required accessories:

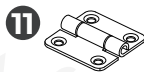- 

11 x2

Stainless steel hinge
- 

14 x8

M6*12 thin head hex socket screw



Required tool:

- 

18



Hex key (Allen wrench) S=4mm

Use [14] to tighten [11] and [1], as well as [11] and [2], together, 4 PCS, in 2 places total.

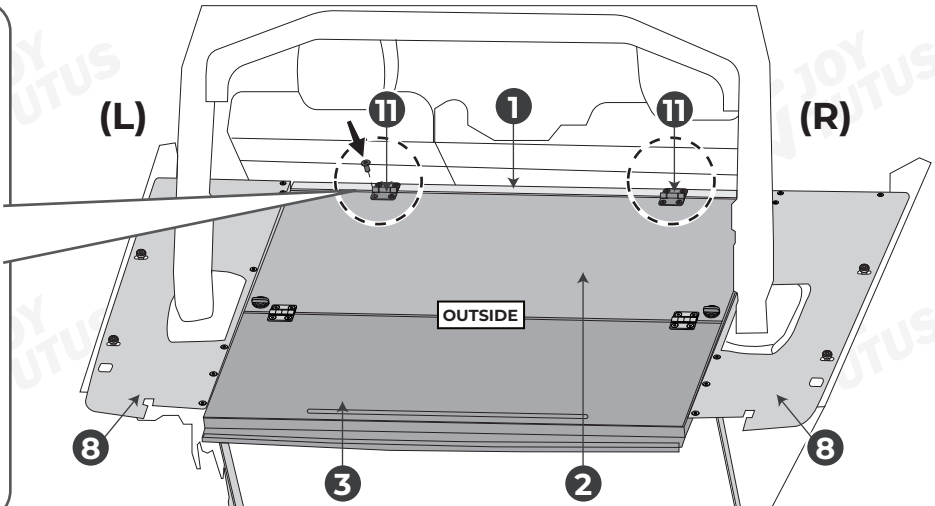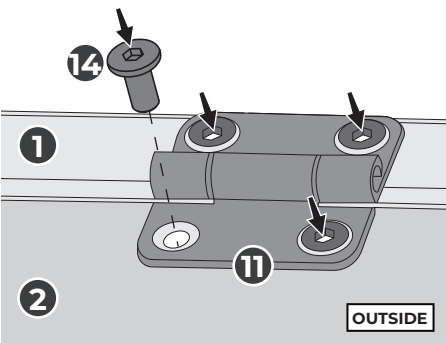


STEP 10:



Required accessories:

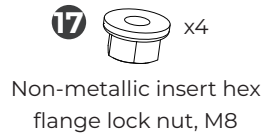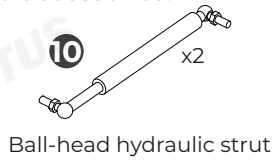

Required tool:

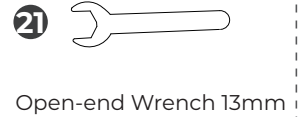

First . Secure the fixed end of [10] to [17] through [4].
Finally . Secure the fixed end of [10] to [17] through [2].
Repeat the same process on the other side.

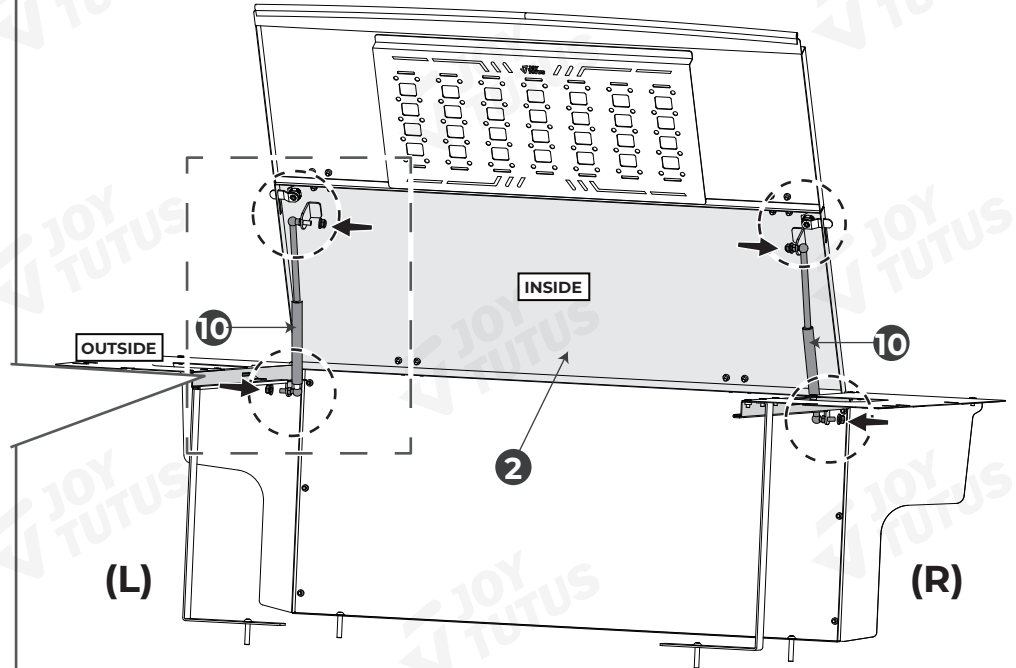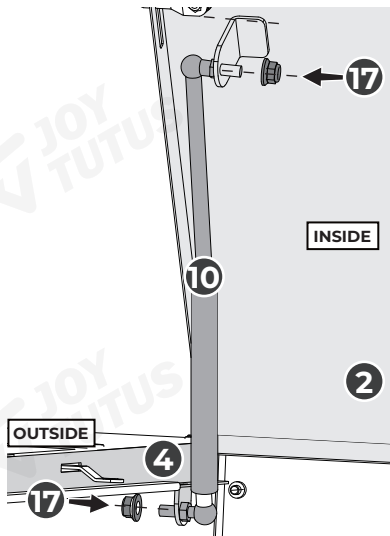

STEP 11:

Close the lock to complete the installation.

If you need to use the roof, you can unscrew the original screws of the anti-theft plate, install the roof in its original position, and then tighten the original screws to complete the installation.

