


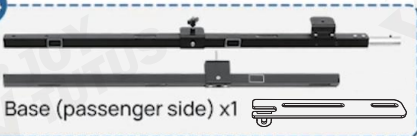

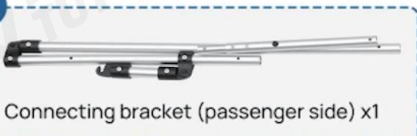
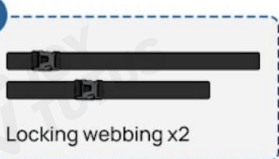
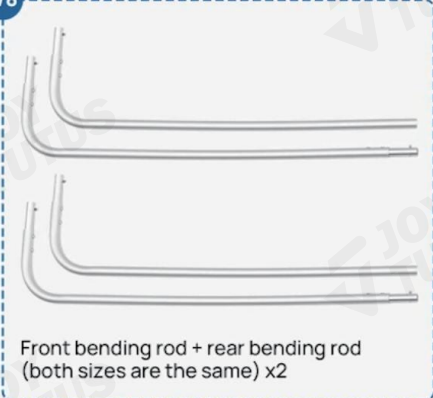
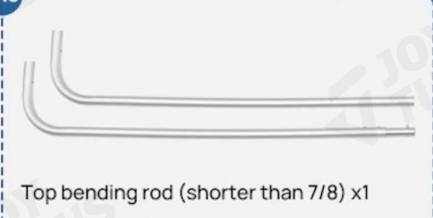









IMPORTANT

Before installation, please make sure that all accessories are ready.
(As shown in the picture below).

PRODUCT INFORMATION

Installation Instructions

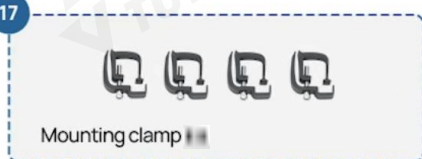

- 1/2 Base (driver side) x1 
- 3/4 Base (passenger side) x1 
- 5 Connecting bracket (driver side) x1 
- 6 Connecting bracket (passenger side) x1 
- 16 Locking webbing x2 
- 7/8 Front bending rod + rear bending rod (both sizes are the same) x2 
- 9/10 Top bending rod (shorter than 7/8) x1 
- 11/12 Tail bending rod x1 
- 13 Support rod x1 
- 14 Soft top x1 
- 15 Hook & loop x4 
- 17 Mounting clamp 
- 18 USAGE GUIDELINES 
- 19 Steel ring x4 
- 20 L wrench x2 
- 21 Pin x2 

Customer Support

Contact us by email: service@joytutus.com


JOYTUTUS help center:
<http://support.joytutus.com>



INSTALLATION TIPS



1. Assemble [1] and [2], then assemble [3] and [4].

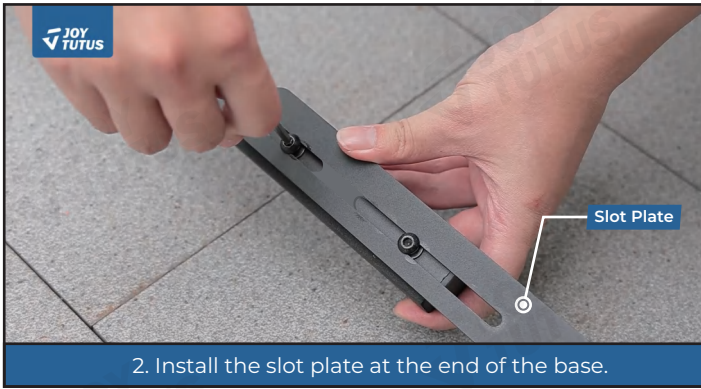

2. Install the slot plate at the end of the base.



3. Place the base on the truck bed, with both ends corresponding to the respective positions on the truck. (Driver and passenger side bases should be symmetrical)




4. Lock the mounting clamp on the corresponding dashed line mark.

Note: Do not change the position of the mounting clamp arbitrarily (It may cause interference with the support structure)




BASE INSTALLATION COMPLETED

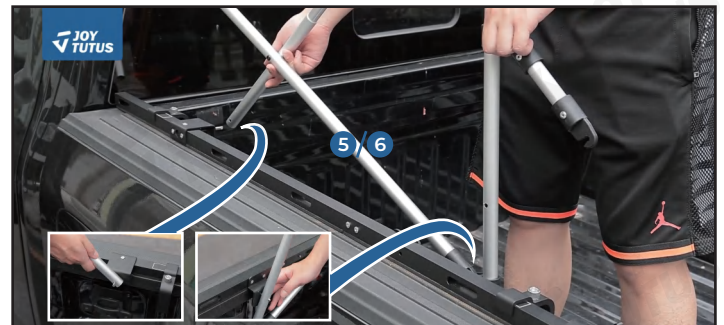

5. Installation of brackets (Driver and passenger side)

1) The holes on the brackets are aligned with the dowel pins on the base.

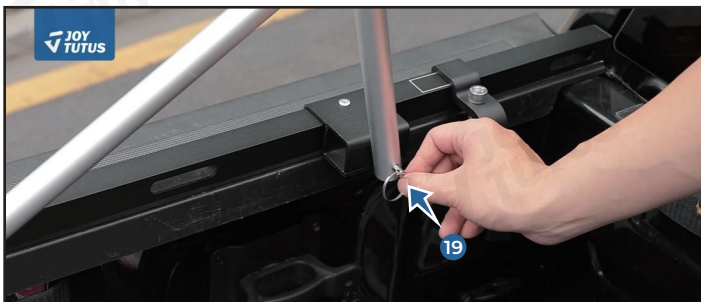

5. Installation of brackets (Driver and passenger side)

2) Insert the dowel pins into the positioning rings to prevent them from falling off.




5. Installation of brackets (Driver and passenger side)

3) Hook and tighten the bolts.




BRACKETS INSTALLATION COMPLETED

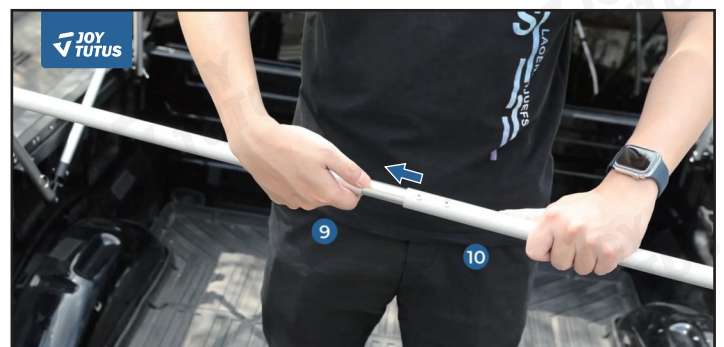


6. Connecting the [9][10]



7. Insert all the top rods.

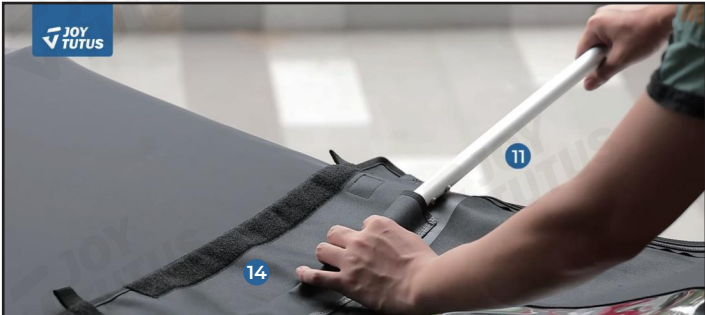


8. Pass the tail tube through the fabric and then lock it into the groove.

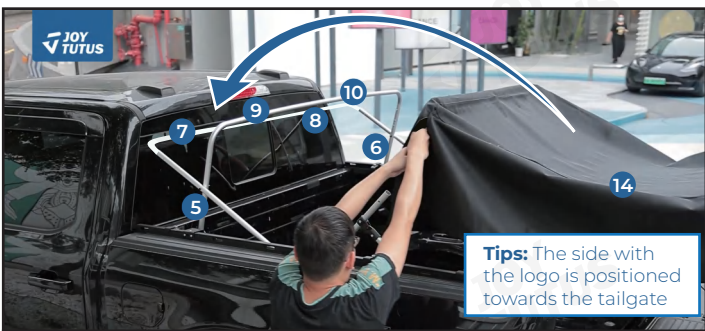


9. Wrap the cover around the bracket


Tips: The side with the logo is positioned towards the tailgate

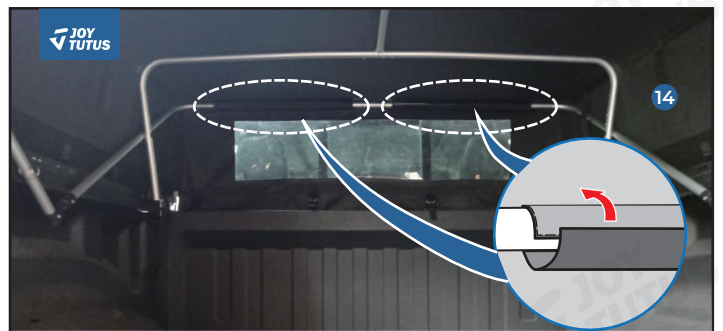

10. Wrap the bracket with Velcro

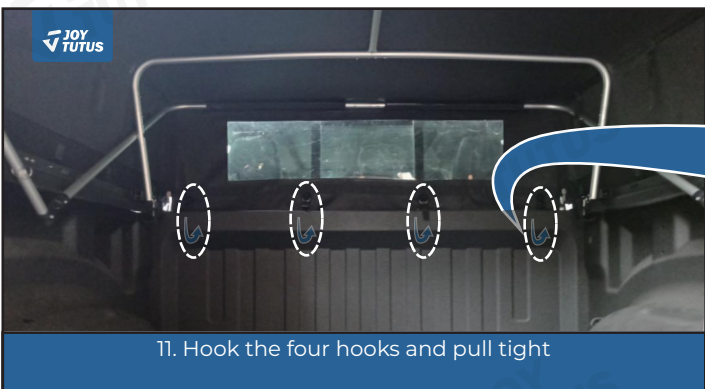

11. Hook the four hooks and pull tight

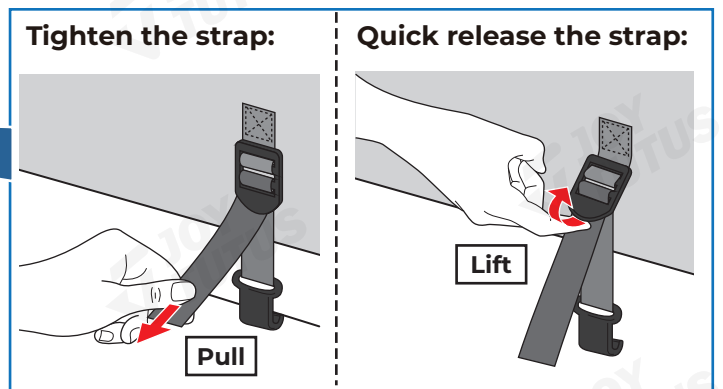

First loosen the hooks, then wrap the bracket with the Velcro, and finally hook the hooks back in



12. Cape Fixing
1) Hook the hooks on both sides of the cape into the slots on the base.



12. Cape Fixing

2) Use the hook & loop at the end to fasten the car cape to the crossbar bracket.




13. Install the top support rod, securely fitting it between the tail bar and the middle bar.



14. Put down tail curtain.



15. Stuck at the rear crossbar.

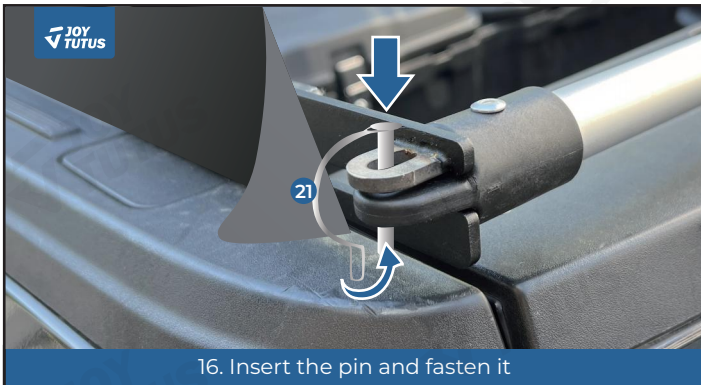

16. Insert the pin and fasten it



17. Zip it up.



18. Stick the fixed webbing on both sides.



19. Stick the hook & loop to the back of the car hood.



20. Stick the hook & loop together.



Tighten the strap:

Pull

Hook the two strap hooks at the tail to complete the installation

If you have any questions, please visit Joytutus website for quick response.
Web: www.joytutus.com